



COOKTOP PARTS

For Model: YKERS507HW0, YKERS507HB0
(White) (Black)

30" ELECTRONIC RANGE
FREESTANDING
DESIGNER STYLE
Self-Clean Oven
Coil Cooktop

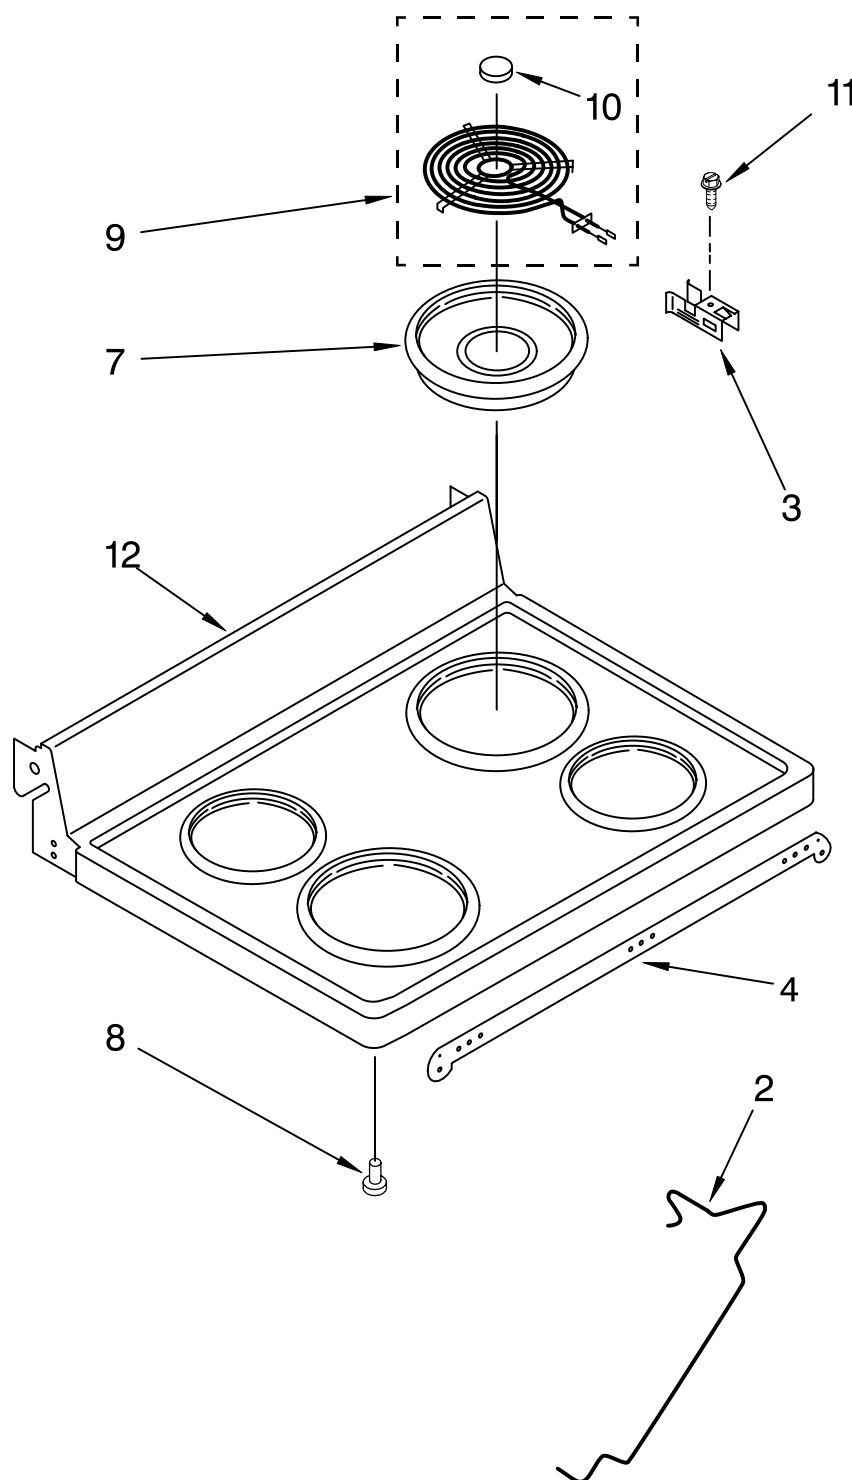


Illus. No.	Part No.	DESCRIPTION
1		Literature Parts Use & Care Guide
	LIT9753843	English
	LIT9753843F	French
	LIT9753688	Wiring Diagram Quick Set Guide
	LIT4449264	English
	LIT4448687	French
	LIT3190440	Instruction Label (Lamp Cover)
	LIT9752777	Installation Instructions
	LIT9752776	Template, Anti-Tip
2	9751538	Cooktop Rod (2)
3	9781324	Receptacle Clip
4	9780585	Wire Guard
7		Ring-Bowl
	3169204	6"
	3169205	8"
8	9750969	Bumper, Rubber (2)
9		Element, Surface
	9781326	Coil, 6" RF
	9781327	Coil, 6" LR (Accu-Simmer)
	9781325	Coil, 8" LF-RR
10	4211952	Medallion, (3)
	4211986	Medallion, (1) (Accu-Simmer)
11	9750891	Screw, 6-32 x 1/4
12		Cooktop, Coil
	9781989GW	White
	9781989GB	Black

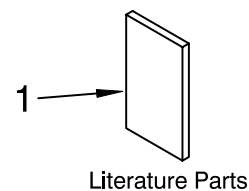

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: YKERS507HW0, YKERS507HB0
(White) (Black)

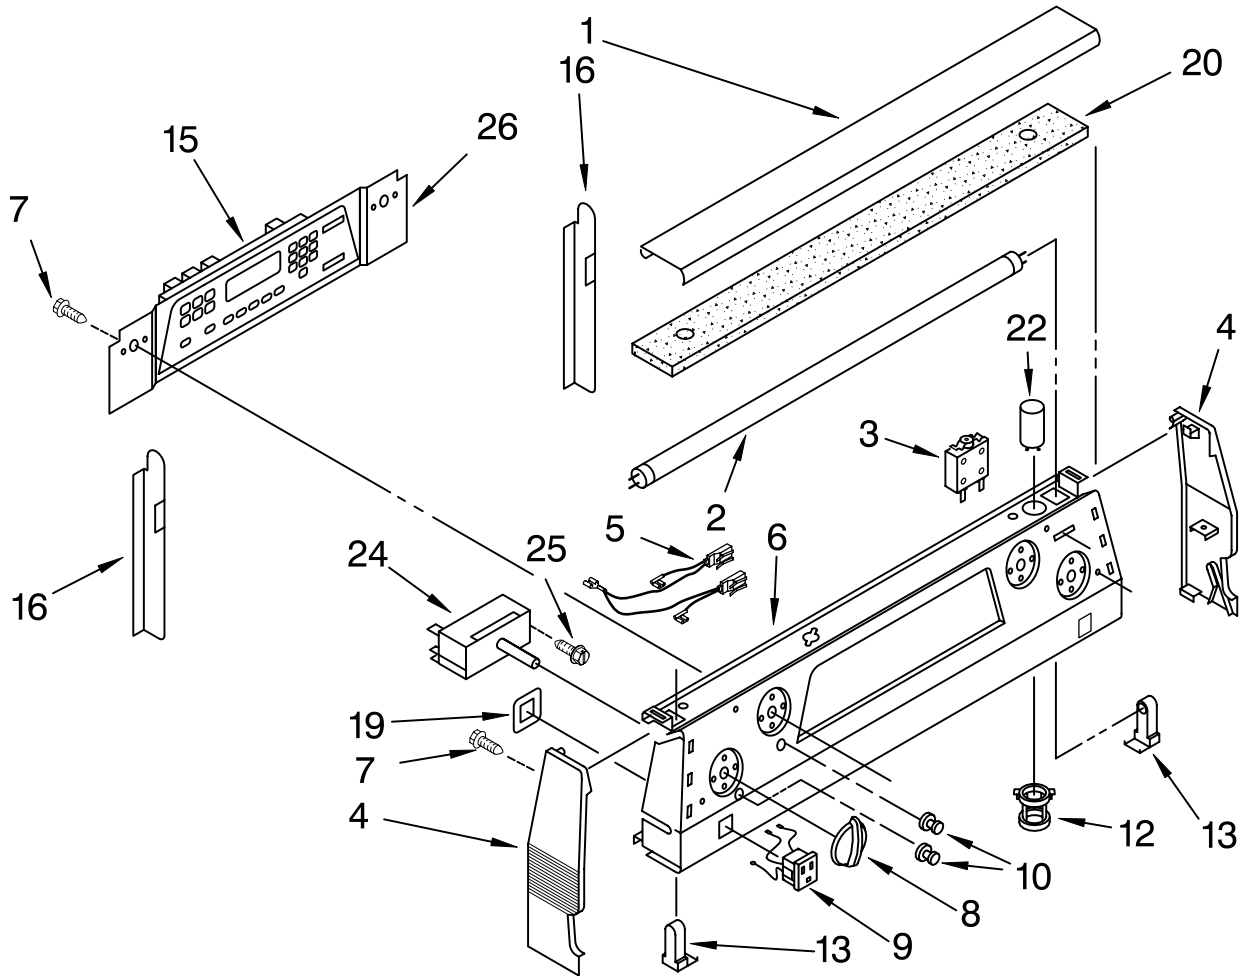

Illus. No.	Part No.	DESCRIPTION
1	9753156PW	Lamp Cover White
	9753156PB	Black
2	422581	Light, Fluorescent
3	3191072	Breaker, 15 Amp.
4		End Cap
		Right Hand
	9750367FW	White
	9750367FB	Black
		Left Hand
	9750366FW	White
	9750366FB	Black
5	9753422	Indicator


Illus. No.	Part No.	DESCRIPTION
6	9754256PW	Panel, Control White
	9754256PB	Black
7	9780265	Screw, 10-16 x 3/8
	9754008	Insulation
8		Knobs, Control (4)
	9750372FW	White
	9750372FF	Black
9		Outlet, Untimed
	9751480FW	White
	9751480FB	Black
10	9752589	Indicator Lens
12	9750866	Starter Holder
13	9752760	Receptacle, Light

Illus. No.	Part No.	DESCRIPTION
15	9753667CW	Oven Control White
	9753667CB	Black
16	9780655	Brace, Control Pnl
19	9751046	Support, Outlet
20	9750995	Insulation
22	9781118	Starter, Lamp
24		Infinite Switch
	9750638	1250/1500W, (2)
	9750641	2100/2600W, (2)
25	3400816	Screw, 8-32 x 3/16
26	9780655	Bracket, Timer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Model: YKERS507HW0, YKERS507HB0
(White) (Black)

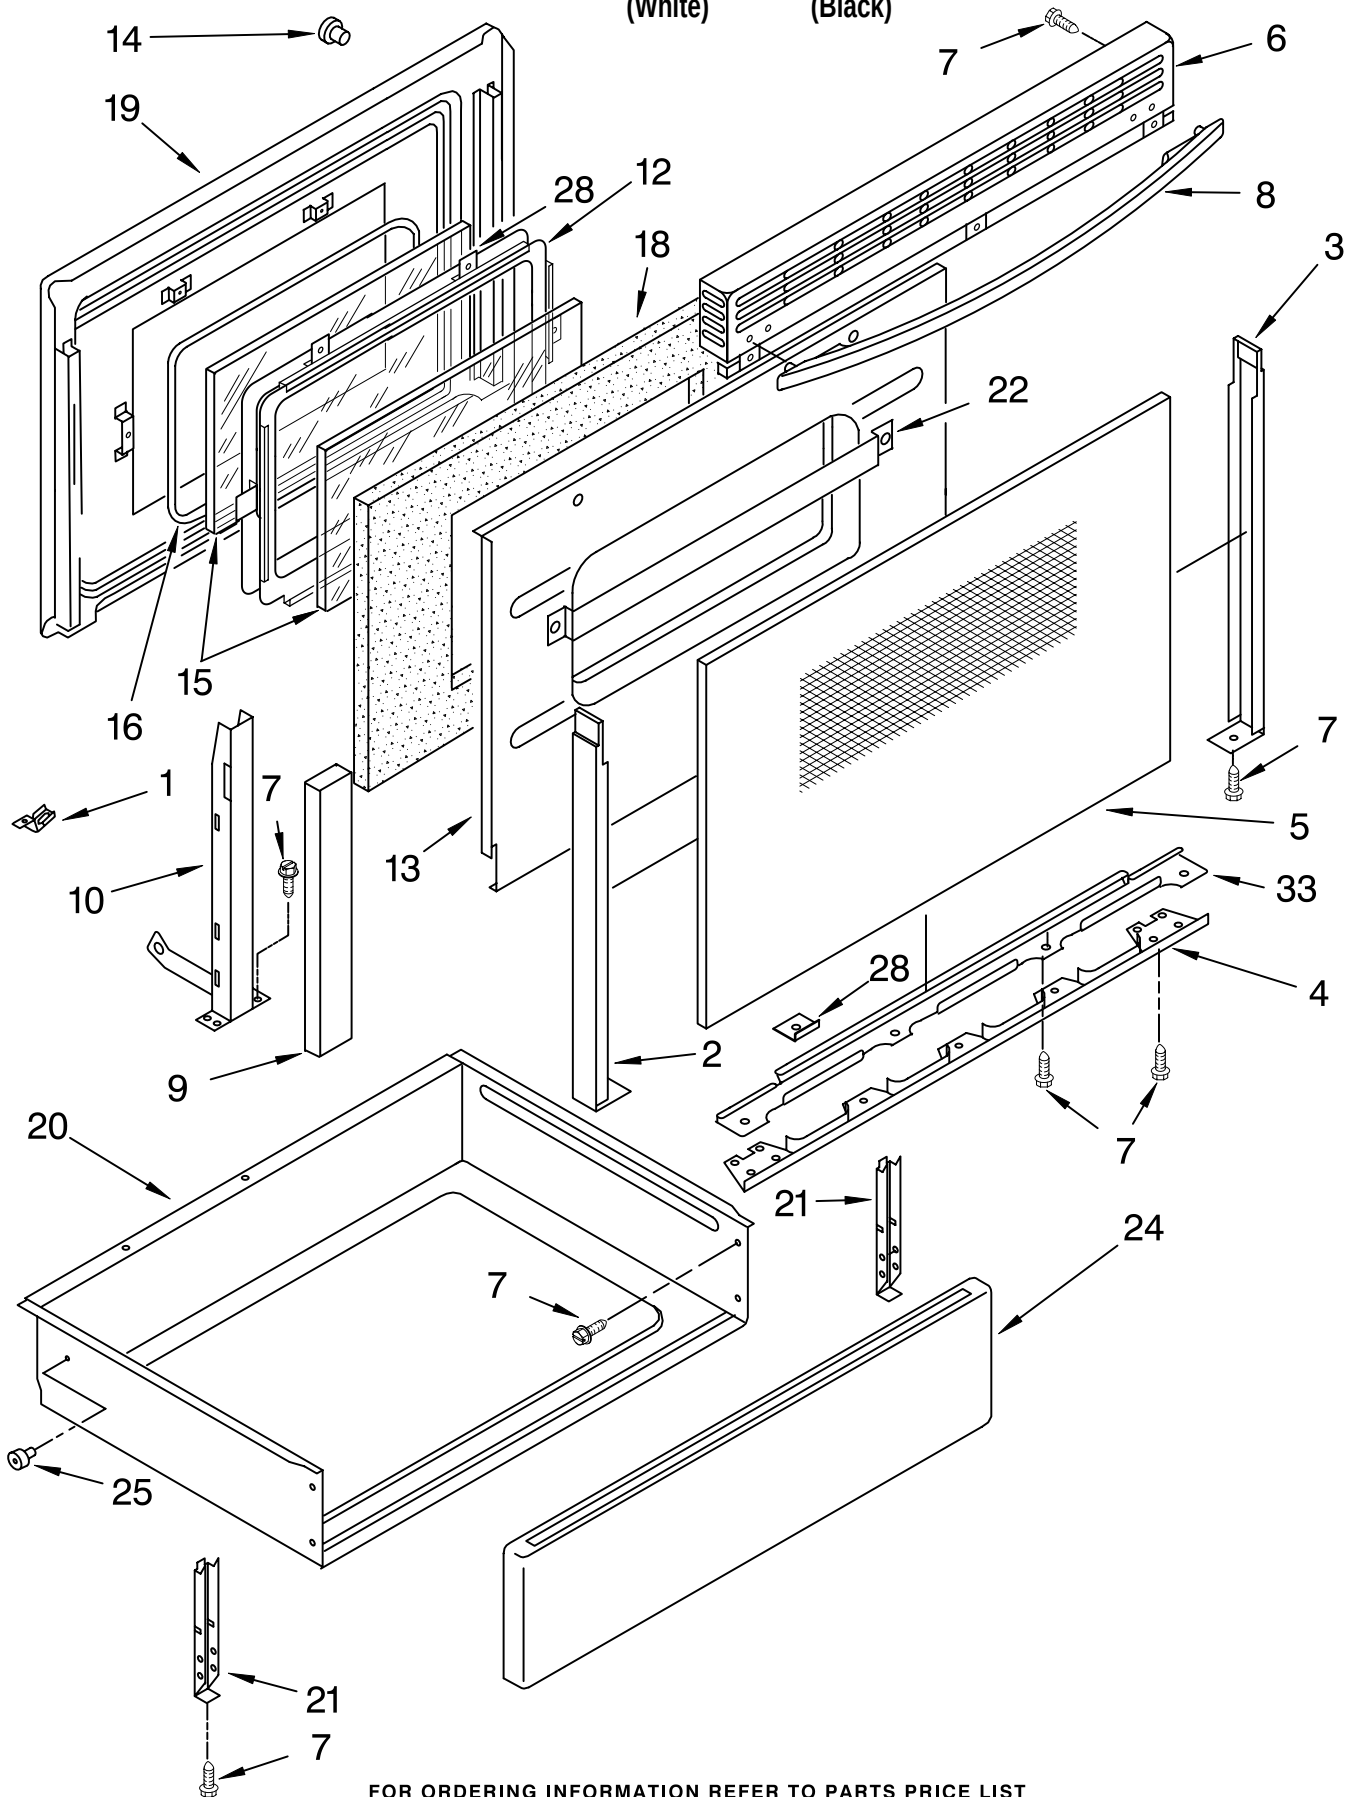

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS


For Model: YKERS507HW0, YKERS507HB0
(White) (Black)

Illus. No.	Part No.	DESCRIPTION
1	9750676	Retainer, Glass
2		Trim, Door-Left
	9782003PW	White
	9782003PB	Black
3		Trim, Door-Right
	9782004PW	White
	9782004PB	Black
4		Trim, Door Bottom
	9781209PW	White
	9781209PB	Black
5		Glass, Door
	9781627PW	White
	9781627PB	Black
6	9753498GW	Vent, Door
	9781659	Gasket, Door Vent
7	9780265	Screw, 10-16 x 3/8
8		Handle, Door
	9780523PW	White
	9780523PB	Black
9	9781449	Gasket, Door Glass
10	9782033	Hinge, Door R or L
12	9781602	Frame, Window
13	9781586	Shield Door
14	9780771	Bumper, Rubber
15	9781593	Glass, Door (2)
16	9781587	Seal, Window
18	9754006	Insulation
19	9781600GM	Liner, Door
20	9780583	Drawer & Roller
21	9750169	Bracket, Drawer
22	9750693	Heat, Channel
24		Front, Drawer
	9782108PW	White
	9782108PB	Black
25	423713	Roller, Support
	90296	Clip
28	9781502	Retainer, Window
33	9781771	Steam Deflector

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Model: YKERS507HW0, YKERS507HB0
(White) (Black)

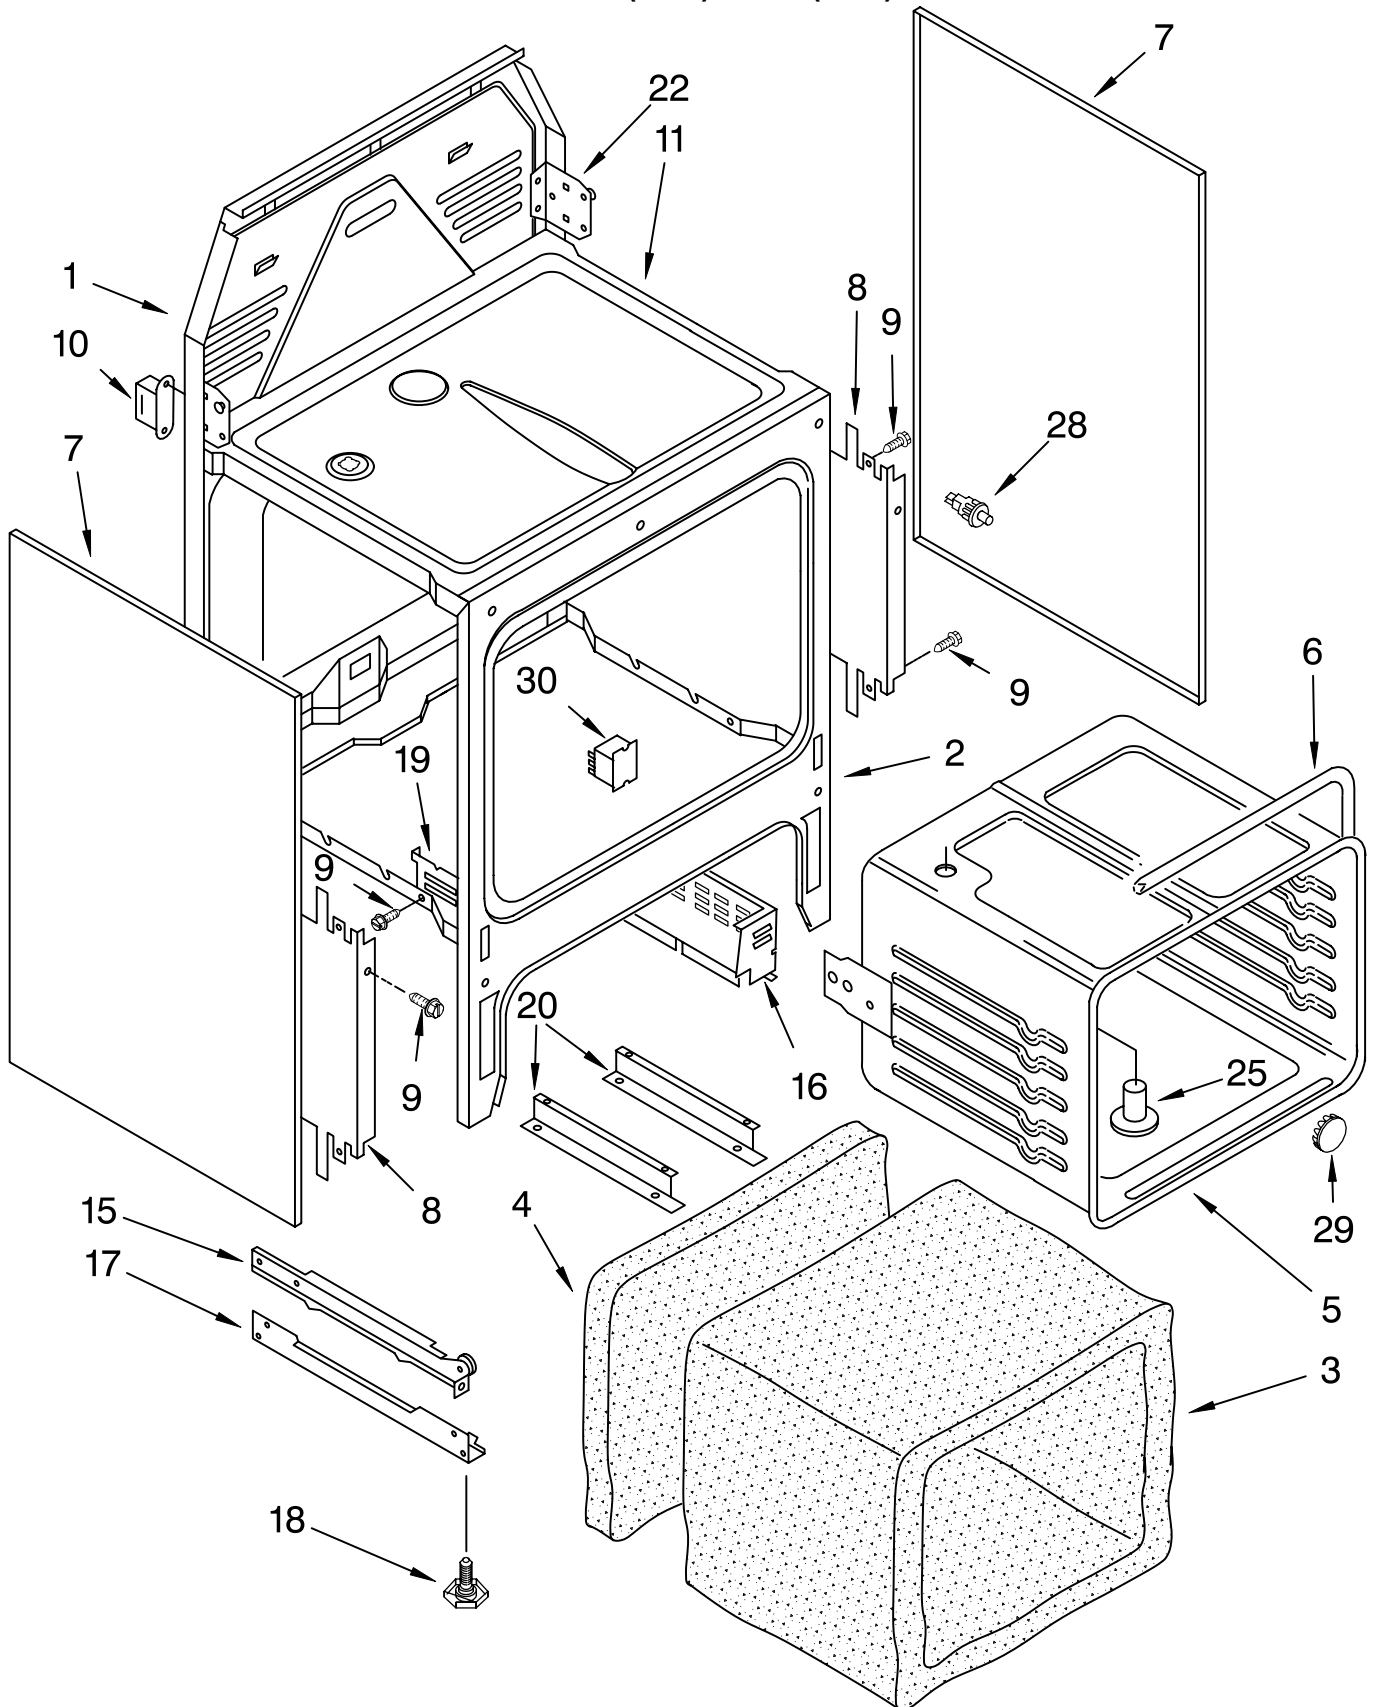

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS


For Model: YKERS507HW0, YKERS507HB0
(White) (Black)

Illus. No.	Part No.	DESCRIPTION
1	9750146	Main Chassis, Back
2	9750514GM	Chassis, Front
3	9754003	Insulation, Wrap
4	9754011	Insulation, Rear
5	9753744GM	Oven Liner
6	3191649	Gasket Oven
7		Side Panel, Oven
	9781907PW	White
	9781907PB	Black
8	9780664	Shield, Insulation
9	9780265	Screw
10	4451891	Transformer
11	9750479GM	Burner Box
	83205	Washer, (3)
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
16	9751060	Support, Fan
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9782005	Hinge Receiver
20	9781904	Support Rail, Pan
22	9750258	Hinge, Cktp.-Left
	9750416	Hinge, Cktp.-Right
25	9753091	Vent Tube
28	9781581	Door Switch
29	9780578	Button, Plug
30	9752404	Solenoid

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Model: YKERS507HW0, YKERS507HB0
(White) (Black)

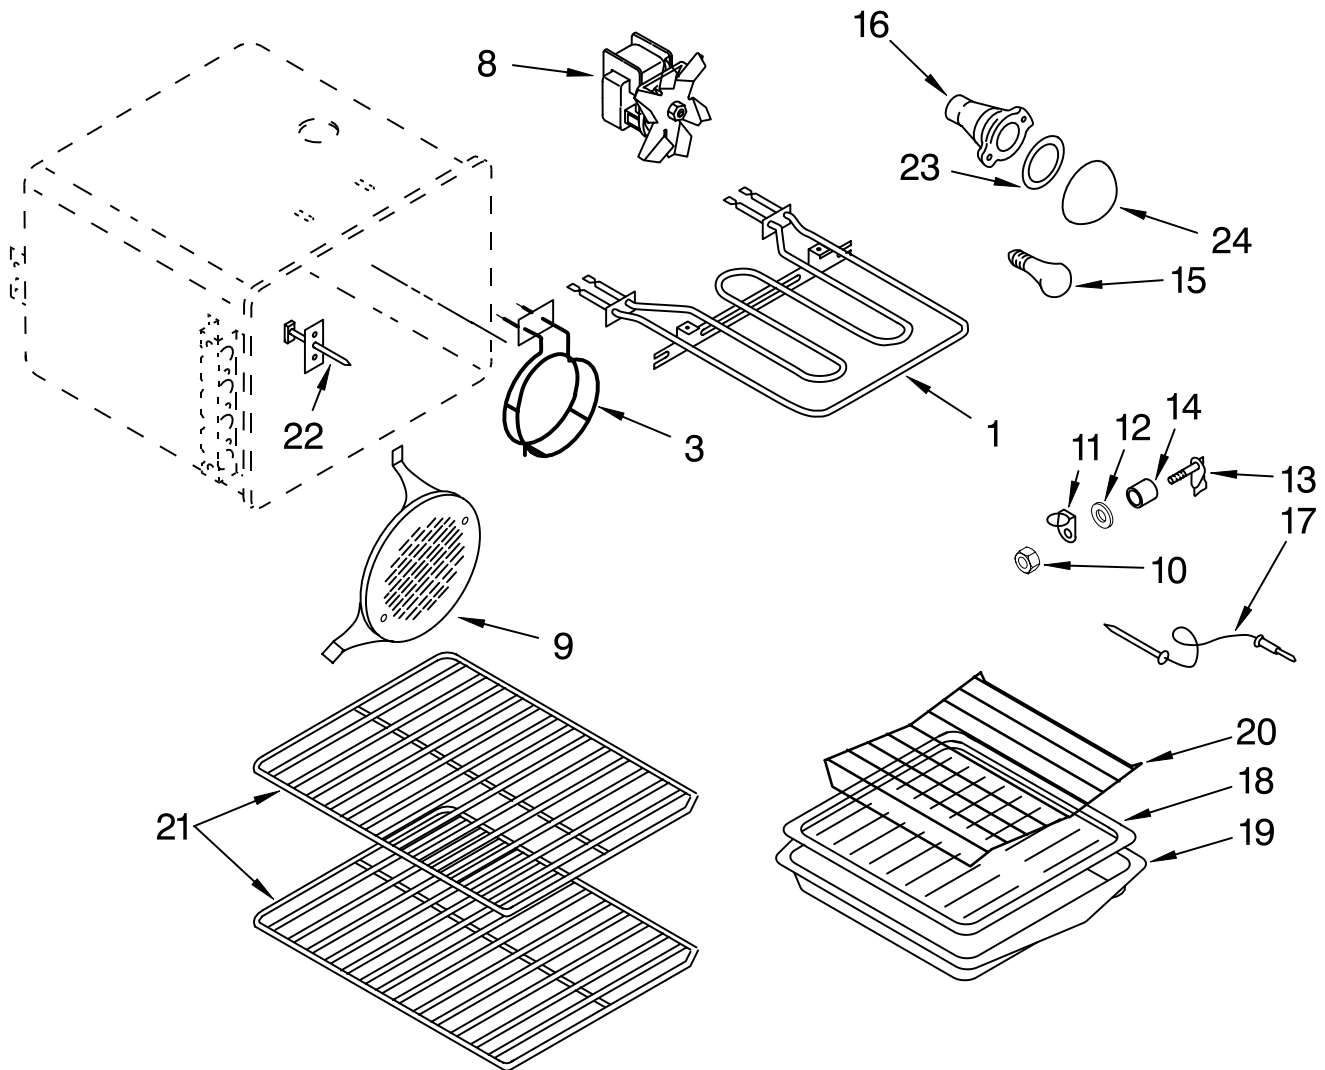

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	9750967	Element, Broil
3	9751447	Element, Convection
	9780269	Screw, Elements 8-32 x 3/8
	340184	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

8	9781543	Assembly, Fan
	9780272	Screw, (3) 10 x 1/2
9	9751904GM	Baffle, Convection
10	4167277	Lock-Nut, Cvr.Jack
11	4167266	Jack Cover
12	4163975	Gasket
13	4173575	Receptacle, Probe
14	3179672	Spacer, Tubing
15	8935	Bulb, Oven Light
16	9781050	Socket, Oven Light


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

17	3150144	Probe
18	420104GM	Grill, Broiler
19	420101GM	Pan, Broiler
20	9750827	Rack, Roasting
21	9750823	Rack, Standard
22	8053344	Sensor
23	3184533	Gasket, Lens
24	9781049	Lens, Oven Light
	9781509	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

REAR CHASSIS PARTS

For Model: YKERS507HW0, YKERS507HB0
(White) (Black)

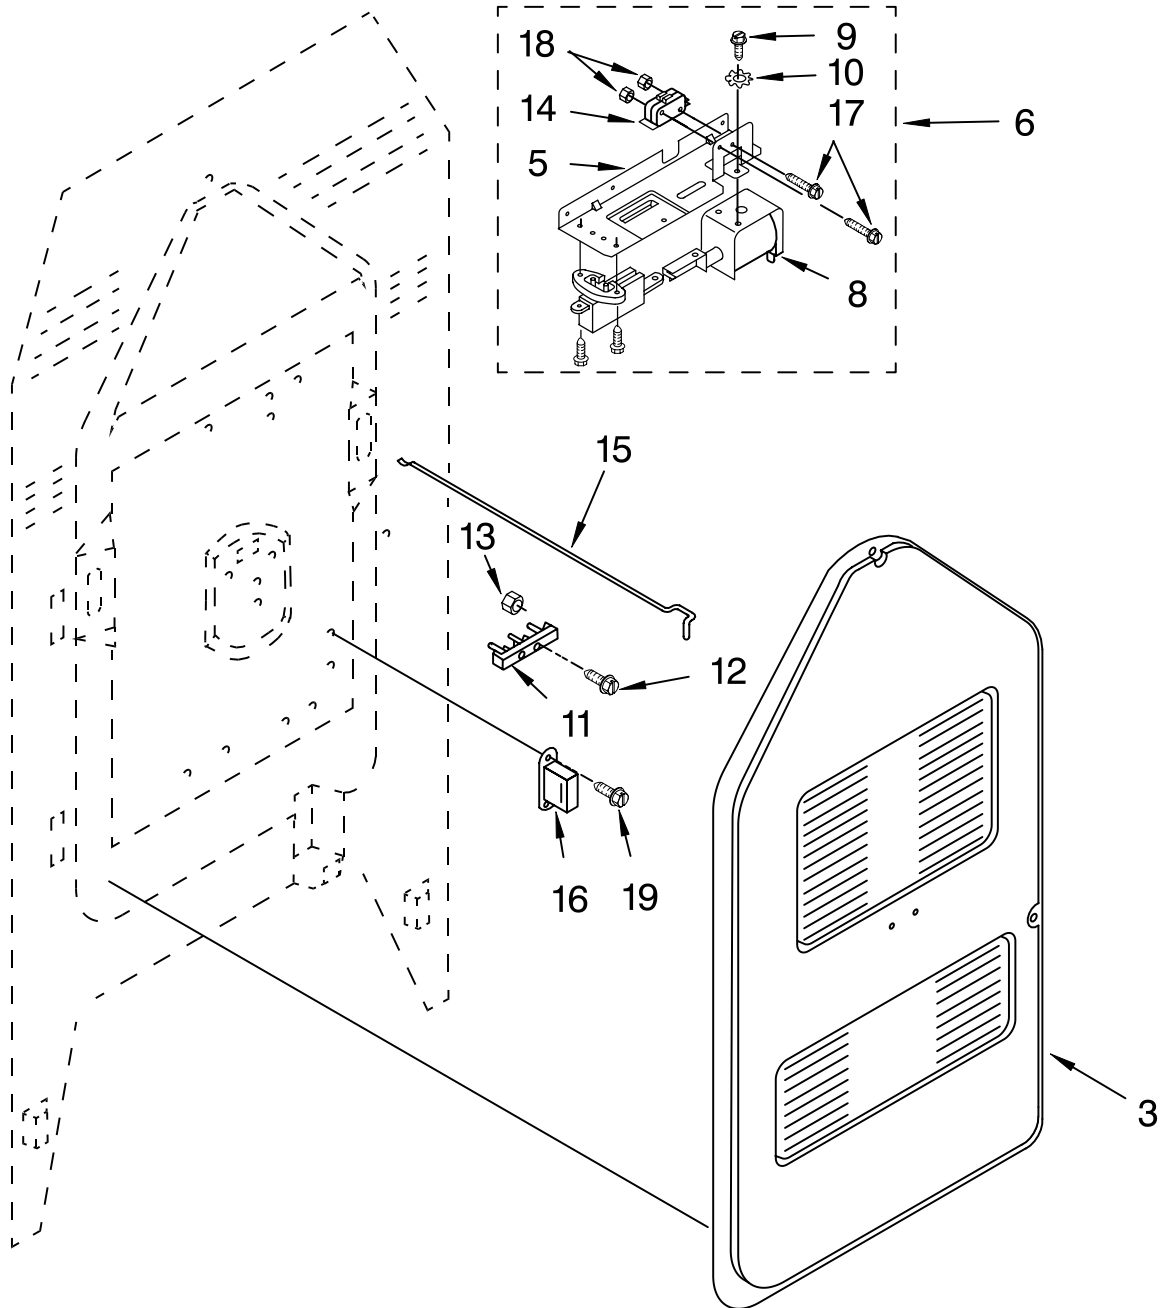


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
3	9750150	Rear Panel	10	424238	Washer (2)	15	9750523	Rod, Lock
5	9750526	Bracket, Lock	11	258076	Block, Terminal	16	9780881	Ballast, Lamp
6	9752404	Oven Lock Assembly	12	98884	Screw	17	9750887	Screw (2)
8	9752409	Solenoid	13	112432	Nut	18	9750888	Nut
9	422222	Screw, (2)	14	9750965	Switch, Interloc	19	9780265	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

HIDDEN BAKE PARTS

For Model: YKERS507HW0, YKERS507HB0
(White) (Black)

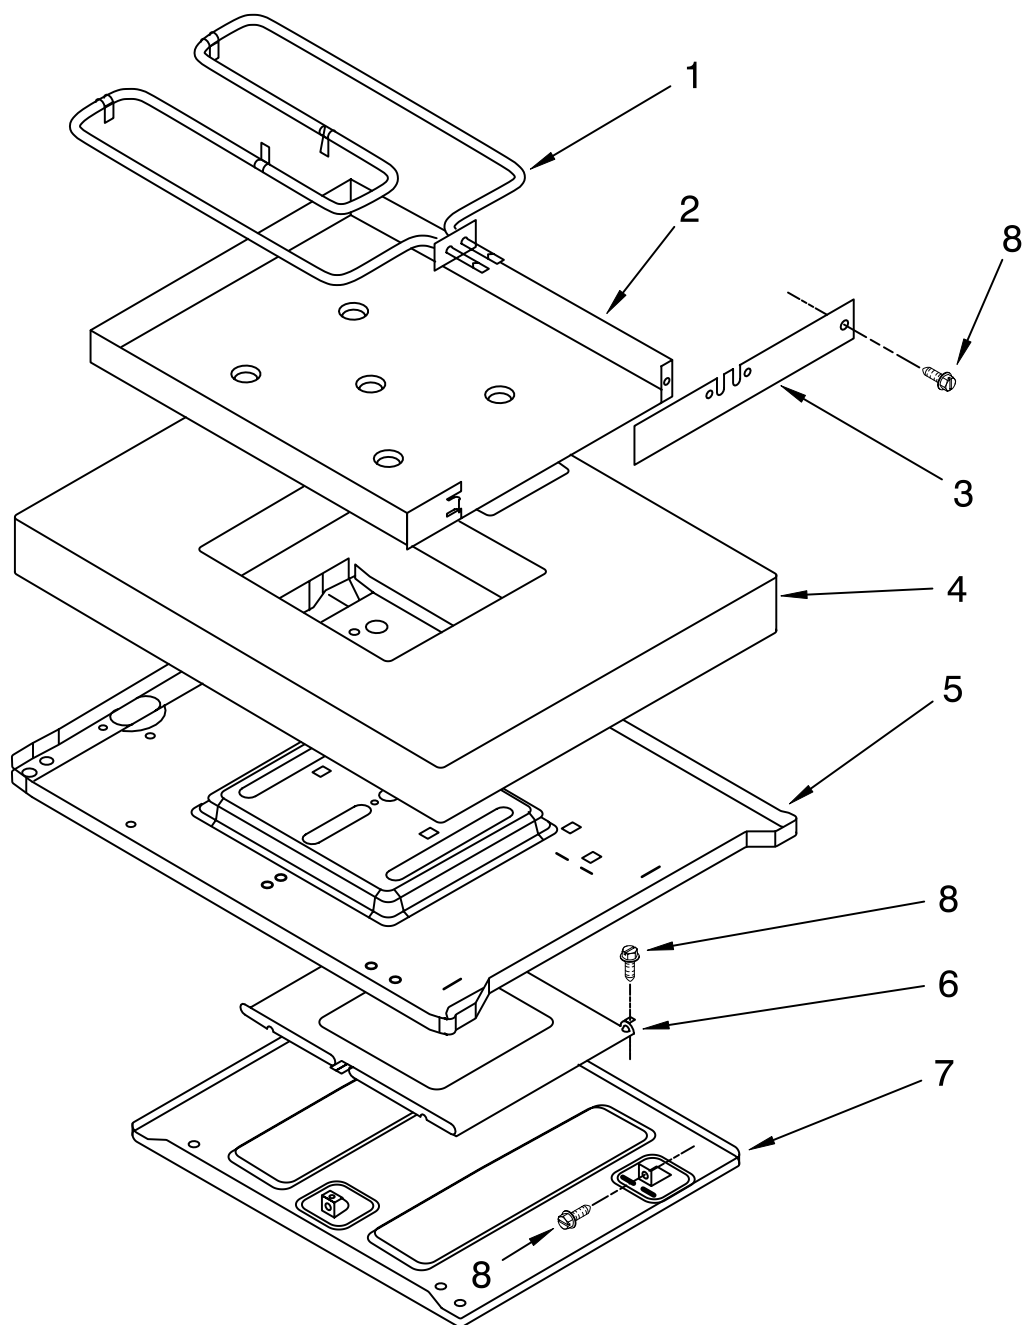

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

1	9752294	Element, Bake
2	9782048	Pan, Hidden Bake
3	9782049	Cover, Hidden Bake
4	9754005	Insulation
5	9752735	Retainer, Insulation
6	9782050	Plate, Reflector
7	9782051	Shield
8	9780265	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Model:YKERS507HW0, YKERS507HB0
(White) (Black)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

SPLICING WIRES--25FT.

LENGTH

242828	Wire, Black
	12 Ga. 150°c
242820	Wire, Black
	14 Ga. 150°c
242821	Wire, Blue
	14 Ga. 150°c
242822	Wire, Brown
	14 Ga. 150°c
242830	Wire, Brown
	14 Ga. 200°c
242823	Wire, Green
	14 Ga. 150°c
242824	Wire, Orange
	14 Ga. 150°c
242829	Wire, Red
	12 Ga. 150°c
242825	Wire, Red
	14 Ga. 150°c
242831	Wire, Red
	14 Ga. 200°c
242826	Wire, White
	14 Ga. 150°c
242827	Wire, Yellow
	14 Ga. 150°c
242832	Wire, Yellow
	14 Ga. 200°c

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain
	(2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)

REFINISHING MATERIAL

799832	Kit, Porcelain
	Repair
	(White)
242756	Touch-Up
	Self-Clean (1/2 Pt.)

CLEANER, COOKTOP

9780196	Glass Cleaner
3183488	Scraper

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

ACCESSORIES

241430	Foil, Aluminum
	Oven (18" x 25')

LUBRICANT

261582	Grease
--------	--------

WIRING HARNESS PARTS

9753678	Harness, Wire
	(Main)
9753921	Harness, Wire
	(Transformer)
9751014	Harness, Wire
	(Cooktop)
9753683	Harness, Wire
	(Hidden Bake)
9750376	Harness, Wire
	(Door)
9752771	Harness, Wire
	(Cooktop)
9781291	Harness, Wire
	(Outlet)
9751139	Harness, Wire
	(Meat Probe)
9751003	Ground Lead
9752772	Harness, Wire
	(Fluorescent)
9752365	Wire, Jumper
9750984	Hanger, Wire
9781287	Power Cord
20082084	Wire Tie

ANTI-TIP KIT

9751745	Anti-Tip Kit
---------	--------------